



BL-818GT



Quick Start Guide

01 What's in the box

Please make sure you have everything included in the package.



BL-818GT unit



Li-Ion Rechargeable Battery



Micro USB cable

Note: Product operation guide and download info, please find the Download Index file stored in the memory of BL-818GT and you can read or install accordingly under internet connection.

02 Installing the Battery

- Remove the back cover by pushing the battery cover release tab with your thumbnail.
- Insert the battery, and align the battery contacts with the terminals in the battery compartment.
- Place the back cover over the battery compartment, and press it downward until it clicks into place.



03 Charging the BL-818GT

 
Please FULLY charge the BL-818GT for the first time use by connecting the supplied Micro USB cable through computer or car's cigarette adaptor.



- Green LED On : On Charging
- Green LED Off: Fully Charged

Caution: Risk of explosion if Battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

04 BL-818GT Function buttons

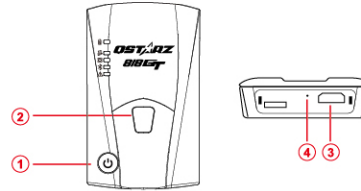

- Power button:** Press 2 seconds to power on. Press to show battery status. (Top to down each LED indicates 20%)
- G-Sensor button:** Press & hold 1 second to calibrate G-sensor.
- Micro USB Jack:** Device Charging and Updating firmware.
- Reset Button:** Shut down the device. (Inside the rubber cover)

05 LED Indicators

LED symbol	LED Color	Status	Description
	Orange	Flashing	Low Power
	Green	On	Recharging
	Off	N/A	1. Fully charged. 2. Device power off
	Off	N/A	Device power off
	Green	On	GPS position is fixed
	Off	N/A	1. Searching for GPS satellite signal 2. Device power off
	Blue	Flash	Searching for device
	Blue	On	Bluetooth connected
	Orange	On	GPS is not connected with satellite
	Off	N/A	1. GPS position is fixed 2. Device power off

06 Beep Code

Status	Beep code	Description
Power On	1 short beep	1 short beep when device switch On.
Power Off	1 long and short beep	1 long and short beep when device switch Off.
GPS fixed	2 short beep	2 short beep when GPS location is fixed.
G-Sensor Calibration	2 short beep	2 long beep when G-Sensor button being pressed.

07 Acquiring Satellite Signal

- Hold on Power button to power on BL-818GT.
- Place the device outside under clear view of sky to acquire GPS signals.
- Acquiring GPS signals may take few minutes. The GPS LED is turning to solid green when it has connected with GPS satellites.

08 Update firmware

- Download and extract the firmware from Qstarz web site <http://racing.qstarz.com/Download.html>
- Power off BL-818GT and connect with computer via Micro USB cable.
- Copy the firmware file FW.qst to the root directory of BL-818GT internal memory.
- Unplug the Micro USB cable, and firmware update will begin automatically. LEDs will light on alternately during the update process.
- Once firmware update is completed, the device will turn off automatically.



Note: Connect your BL-818GT device with Computer, and browse the root directory of BL-818GT in My Computer. Find the "DownloadIndex_BL-818GT.html" file and click it with internet connection. A download webpage will pop-up, then click on the link and you can have latest product information for BL-818GT.

 
09 Product Compatibility

- BL-818GT is compatible with most iOS and Android devices via the Qstarz BLE GPS View App.

- Due to hardware and manufacturer variability, we have not verified compatibility with every Android device.

*Download the Qstarz BLE GPS View APP on App Store or Google Play Store.


② Confirm GPS gets fix

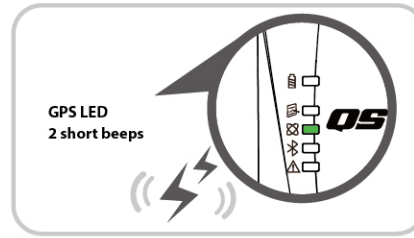

③ Turn on your mobile device's Bluetooth feature

- iPhone Setting > General > Bluetooth > On
- Android phone Settings > Wireless & Networks > Bluetooth: On

 ⑦ View Analysis Data on your QRacing APP

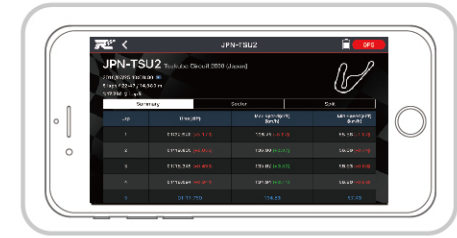

Note

Picture Screen might be slightly varied according to different APP version. For detail operation, please refer to the operating guide on manual of QRacing APP.

10 QRacing APP (iOS version / Android version)

 


QRacing



Please download QRacing APP on App Store or Google Play. QRacing APP is a racing data analysis APP combining GPS data with video overlay support. Read the operating guide on the manual of QRacing APP.

④ Start QRacing APP on your mobile phone

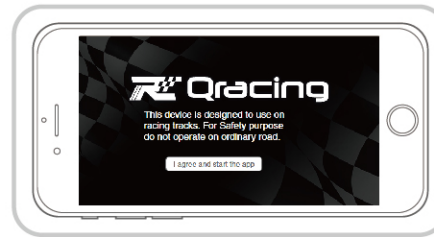


⑤ Register a new account. Login and add your BL-818GT in Setting Page of QRacing APP

11 Start Racing

*The mobile phone photo is illustrated by iPhone. The support OS and versions for QRacing APP, please refer to the description on Qstarz website.

 ① Switch On BL-818GT

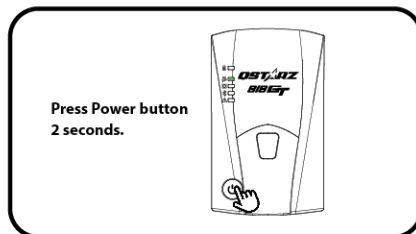

⑥ Start to real-time Racing



12 Product Specifications

- A 10Hz BLE GPS Receiver and provide real time lap timing via QRacing APP
- Adopt high sensitivity GNSS chip and 3-axis accelerometer
- Bluetooth 4.0 BLE enabled device
- Update rate up to 10Hz excellent for High speed racing (updating every 0.1 second)
- G-Sensor button design to calibrate G-sensor immediately
- 5 LED indications to view device status
- Case: Rugged, but not water-resistant
- Power Supply: Rechargeable Lithium-Ion battery, 20 hours operation (typical use)
- Temperature: Operating -10~60°C/ Charging 0~45°C/ Storage -20~60°C

13 Product Care

- Please take out the battery and store it in dry/cool places when not use for a long period.
- If the device isn't used in temperature between -10°C~ 60°C, its battery charging capability will decrease.
- Leave the device far from heat or high temperature environment. And also, do not expose your device in temperature higher than 145°F/60°C to prevent the inside battery from overheating, exploding or burning itself. The Lithium battery inside the device should be recycled.
- Do not attempt to open the device by yourself. Unauthorized hacking may damage the unit, and void your warranty.