

Charging the Battery:

1. Turn the Speaker "OFF", insert the provided charge cable into the charge slot of the speaker, connect the other end to PC or charger with 5V output (Not included), the red charging indicator will light up, indicating charging.
2. Charge time should be 3-5 hours. When fully charged, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge the speaker for more than 8 hours.

NOTE:

1. The speaker will operate without the wired connection using the lithium battery. The amount of battery life depends on how often the Speaker is used, and how media is played. IE: Heavy music, high volume and excessive bass music will use more battery power than spoken words.
2. The built-in rechargeable battery is not replaceable. Do not remove or replace it, and please dispose of in an environmentally friendly manner.
3. When cleaning the product, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

volkano



BLASTER BLUETOOTH SPEAKER

We recommend that you read and retain this instruction manual for future use.

FEATURES:

- 2.1 Channel Outdoor Bluetooth speaker with 4 inch subwoofer;
- Explosive bass and crystal clear sound with dynamic sound effects;
- A2DP bluetooth, wirelessly stream music from any bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad;
- Secure simple pairing for user-friendly operating;
- 10 meters operating range;
- FM radio
- Line-in function suitable for PC, MID, TV and other audio devices;
- TF (TransFlash / Micro SD Card) card support;
- Built-in rechargeable lithium battery 1000mAh;
- Carrier handle for easy transporting.


ACCESSORIES:

- Charging cable, Audio cable, User manual and Carrier Strap.

SPECIFICATIONS:

Bluetooth version:	2.1
	Supports A2DP and AVRCP profiles
Bluetooth range:	Up to 10 meters
Speaker Size:	2 inch
Subwoofer Size:	4 inch
Output:	2W/2.4Ω
Subwoofer output:	7W/4Ω
Connections:	TF (TransFlash / Micro SD Card) card reader, Aux-in 3.5mm jack connection
Power supply:	Built-in rechargeable lithium battery 1000mAh (1.5hours playtime with max volume)
Recharge power:	DC 5V 1A (USB-to-micro USB charging cable included)
Product size:	Ø145*256mm

IDENTIFYING PARTS:

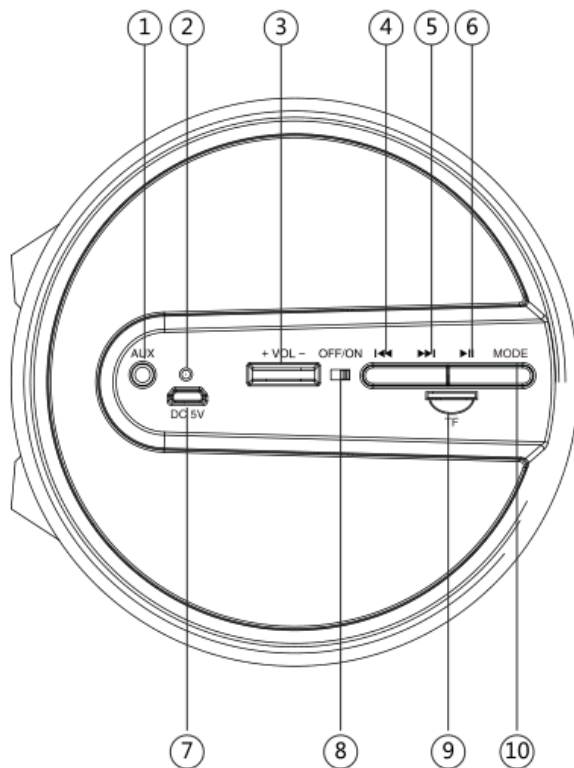

- | | |
|-----------------------|---|
| 1. Aux-in jack | 6. Play / Pause |
| 2. LED indicator | 7. Charging jack |
| 3. Volume Control +/- | 8. ON / OFF button |
| 4. Previous | 9. TF (Micro SD Card) slot |
| 5. Next | 10. Mode (Switches between Bluetooth, TF, FM, AUX-IN) |

INSTRUCTIONS:

Bluetooth connection:

1. Turn the power "ON", The LED light will turn blue, flash quickly and will beep twice.
2. Activate the Bluetooth of your mobile phone and search for device named "BT speaker" and select connect. The blue LED light will flash slowly and beep three times once successfully connected.
3. You can now play music from your mobile phone.
4. Press LAST or NEXT button on the Speaker or on your Mobile phone to select songs you would like to play.
5. Press Play / Pause button on the Speaker or on your Mobile phone to play / stop the music.
6. Use the "Volume Control" to adjust volume up and down. Or to adjust the mobile phones' volume.

Playing music from TF (Micro SD) card:

1. Turn the Power "ON".
2. Insert TF card into slot, the music stored will be played automatically and blue LED light will flash continuously.
3. While playing, short press Forward or Backward buttons to select songs you would like to play, or long press to fast forward or rewind the song.
4. Press PLAY / PAUSE to play or pause.
5. Turn the Power "OFF" when no longer in use.

NOTE: Under Bluetooth or FM mode, if a TF (Micro SD Card) is inserted, it will automatically start playing. To return to the previous mode, use the MODE button.

FM Radio:

1. Use the audio cable provided as an antenna. Insert this cable before using the FM radio to read radio signals.
2. Turn the power "ON", press the "MODE" button to switch to FM radio mode.
3. In FM Radio Mode, short press "Play / Pause" button to auto search the FM Channel and store it automatically.
4. Press LAST or NEXT button to change the stored FM channel.

AUX-IN:

For other compatible music devices (IE: MP3 Player, etc), use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device. Then press the "MODE" button to switch to AUX-IN mode.

NOTE: When using an external device, all functions will be controlled by the external device except the "Play / Pause" button.