

to set SPI I/F, remove two 0-ohm Rs at JB1H & JB2H on the backplane of OLED  
and reconnect the two Rs to JB1L & JB2L terminals

