

QTY.	PART NUMBER	QTY.	PART NUMBER
1	MOUSE-1-01-SIDE FRAME PLATE	1	MOUSE-3-01-SMOKE BOX SUPPORT FRAME
1	MOUSE-1-01-SIDE FRAME PLATE	1	MOUSE-3-02-FRONT FACE PLATE+DOOR
1	MOUSE-1-02-FRONT-REAR BUFFER BEAM	1	MOUSE-3-03-DOOR LOCKING DART
1	MOUSE-1-02-FRONT-REAR BUFFER BEAM	1	MOUSE-3-04-CHIMNEY
2	MOUSE-1-03-SIDE FRAME PLATE ANGLE BRACKET	1	MOUSE-3-05-SNIFFER VALVE
2	MOUSE-1-03-SIDE FRAME PLATE ANGLE BRACKET	1	MOUSE-3-06-STEAM CONNECTOR NIPPLE
1	MOUSE-1-04-FRONT SKIRT MOUNTING PLATE	1	MOUSE-3-07-BOILER SHELL
1	MOUSE-1-05-REAR SKIRT MOUNTING PLATE	1	MOUSE-3-08-FIRE BOX
1	MOUSE-1-06-FRONT SKIRT PLATE	1	MOUSE-3-09-SUPPLY STEAM MANIFOLD
1	MOUSE-1-07-REAR SKIRT PLATE	1	MOUSE-3-10-BLOWER NOZZLE+PIPE
4	MOUSE-1-08-BUFFER HOUSING	1	MOUSE-3-11-REGULATOR BODY
4	MOUSE-1-09-BUFFER HOUSING BACK PLATE	1	MOUSE-3-12-REGULATOR SPINDLE
2	MOUSE-1-10-BUFFER TYPE-1	1	MOUSE-3-13-REGULATOR HANDLE
2	MOUSE-1-11-BUFFER TYPE-2	1	MOUSE-3-14-REGULATOR HANDLE LINKS
4	MOUSE-1-12-BUFFER END COLLAR	1	MOUSE-3-15-FIRE BOX DOOR
4	MOUSE-1-13-BUFFER COIL SPRING	1	MOUSE-3-16-FIRE DOOR HINGE BRACKET
4	MOUSE-1-14-FOOTPLATE SUPPORT ANGLE	1	MOUSE-3-17-BLOWDOWN VALVE
2	MOUSE-1-15-PULLING HOOK	1	MOUSE-3-18-WATER LEVEL GAUGE
8	MOUSE-1-16-AXLE BOX GUIDE PLATE	1	MOUSE-3-19-BOILER TOP STEAM MANIFOLD
1	MOUSE-1-17-FRONT RAIL SCOOP	1	MOUSE-3-20-STEAM DOME
1	MOUSE-1-17-FRONT RAIL SCOOP	1	MOUSE-3-21-SAFETY VALVE
1	MOUSE-1-18-REAR RAIL SCOOP	1	MOUSE-3-22-SAFETY VALVE CENTER PULL SPRING
1	MOUSE-1-18-REAR RAIL SCOOP	1	MOUSE-3-23-BOILER STEAM SUPPLY PIPE-1
1	MOUSE-1-19-MOTION CROSS STRETCHER	1	MOUSE-3-24-SNIFFER SUPPLY PIPE
1	MOUSE-1-20-MOTION CROSS STRETCHER ANGLE	1	MOUSE-3-25-BOILER SUPPLY PIPE PART-2
1	MOUSE-1-20-MOTION CROSS STRETCHER ANGLE	12	MOUSE-3-26-M8x5 PIPE NUT
4	MOUSE-1-21-SLIDE VALVE ROD BUSH	1	MOUSE-3-27-WATER GAUGE PIPE
2	MOUSE-1-22-CROSSHEAD ROD BUSH	2	MOUSE-3-28-BOILER NON RETURN VALVE
4	MOUSE-1-23-AXLE BOX	1	MOUSE-3-29-BLOWER VALVE
8	MOUSE-1-24-AXLEBOX SPRING SHAFT	1	MOUSE-3-30-INJECTOR STEAM SUPPLY VALVE
8	MOUSE-1-25-AXLEBOX COIL SPRING	1	MOUSE-3-31-MANIFOLD-BLOWER VALE PIPE
4	MOUSE-1-26-AXLEBOX KEEPER	1	MOUSE-3-32-STEAM PRESSURE GAUGE
4	MOUSE-1-27-AXLEBOX SPRING RETAINER	3	MOUSE-3-33-BOILER STRAP
4	MOUSE-1-28-AXLEBOX ROLLER BEARING	2	MOUSE-3-34-HAND RAIL+SUPPORT
1	MOUSE-1-29-WTR FD PMP CROSS BRACE PLATE	QTY.	PART NUMBER
2	MOUSE-1-30-WTR FD PMP SPACER+ANGLE	1	MOUSE-4-01-FRONT END FOOTPLATE
2	MOUSE-1-31-WTR FD PMP MOUNTING BRACKET	1	MOUSE-4-02-LEFTHAND SIDE FOOTPLATE
2	MOUSE-1-32-BRAKE SYSTEM SUPPORT BRACKET	1	MOUSE-4-03-LEFTHAND WATER TANK
2	MOUSE-1-33-BRAKE CYLINDER STEM	2	MOUSE-4-04-WATER TANK FILLER LID
8	MOUSE-1-34-BRAKE CYLINDER STEM LINK	1	MOUSE-4-05-LEFTHAND OUTER WALL
4	MOUSE-1-35-BRAKE SHOE CONNETION ROD	1	MOUSE-4-06-PISPLACEMENT LUBRICATOR
4	MOUSE-1-36-BRAKE SHOE STABILIZER ROD	1	MOUSE-4-07-BYPASS VALVE
4	MOUSE-1-37-BRAKE STABILIZER CONNETOR	1	MOUSE-4-08-RIGHTHAND SIDE FOOTPLATE
4	MOUSE-1-38-BRAKE SHOE	1	MOUSE-4-09-RIGHTHAND WATER TANK
1	MOUSE-1-39-MECH. WATER PUMP	1	MOUSE-4-10-RIGHTHAND OUTER WALL
1	MOUSE-1-40-MECH. WTR PMP DISCHARGE NIPPLE	1	MOUSE-4-11-DUMMY FRONT DOORS
1	MOUSE-1-41-CYLINDER BLOCK	1	MOUSE-4-12-REAR FOOTPLATE
2	MOUSE-1-42-CYLINDER FRONT COVER	1	MOUSE-4-13-RH WATER TANK HAND PUMP COVER
2	MOUSE-1-43-CYLINDER REAR COVER	1	MOUSE-4-14-HAND PUMP
2	MOUSE-1-44-SLIDE VALVE GUIDE NIPPLE+GLAND	2	MOUSE-4-15-HAND PUMP LINK
1	MOUSE-1-45-CYLINDER BLOCK STEAM EXHAUST	1	MOUSE-4-16-HAND PUMP PISTON
1	MOUSE-1-46-ASH PAN	1	MOUSE-4-17-HAND PUMP HANDLE
2	MOUSE-1-47-FIRE GRATE SUPPORT BRACKET	1	MOUSE-4-18-WATER TANKS BALANCE PIPE
1	MOUSE-1-48-FIRE GRATE	1	MOUSE-4-19-WATER TANK TO MECH PUMP PIPE
1	MOUSE-1-49-FIRE GRATE RESTING PIN	1	MOUSE-4-20-MECH. PUMP TO BYPASS WATER PIPE
1	MOUSE-1-50-EXHAUST PIPE EXTENSION	1	MOUSE-4-21-BYPASS TO WATER TANK PIPE
1	MOUSE-1-51-MECH. WTR PMP TOP DISCHARGE NIPPLE.	1	MOUSE-4-22-HAND PUMP INTERNAL PIPE
2	MOUSE-1-52-REAR FOOTPLATE ANGLE BRACKET	1	MOUSE-4-23-RH WATER TANK TO MECH. PUMP PIPE
2	MOUSE-1-53-WATER TANKS PIPE EYELET	1	MOUSE-4-24-CABIN SIDE STEPS
QTY.	PART NUMBER	1	MOUSE-4-24-CABIN SIDE STEPS
1	MOUSE-2-01-FRONT WHEEL AXLE	1	MOUSE-4-25-INJECTOR WATER VALVE
2	MOUSE-2-02A-REAR WHEEL CRANKSHAFT PART-1	1	MOUSE-4-26-WATER TANK TO INJ. WTR VALVE
1	MOUSE-2-02B-REAR WHEEL CRANKSHAFT PART-2	1	MOUSE-4-27-MECH. PUMP TO BOILER NRV PIPE
4	MOUSE-2-02C-REAR WHEEL CRANKSHAFT PART-3	1	MOUSE-4-28-DUMMY WATER INJECTOR
2	MOUSE-2-02D-REAR WHEEL CRANKSHAFT PART-4	1	MOUSE-4-29-MANIFOLD TO DUMMY INJECTOR STEAM PIPE
2	MOUSE-2-03-FRONT WHEEL	1	MOUSE-4-30-DUMMY INJETOR TO BOILER NRV PIPE
2	MOUSE-2-04-REAR WHEEL	1	MOUSE-4-31-WATER SUPPLY TO DUMMY INJECTOR PIPE
4	MOUSE-2-05-WHEEL CRANK PIN	2	MOUSE-4-32-MAKERS PLATE
4	MOUSE-2-06-WHEEL CRANK PIN WASHER	2	MOUSE-4-33-LOCO NAME PLATE
2	MOUSE-2-07-SLIP ECCENTRIC SHEAVE	2	MOUSE-4-34-LOCO NUMBER PLATE
2	MOUSE-2-08-SLIP ECCENTRIC STOP COLLAR	QTY.	PART NUMBER
1	MOUSE-2-09-FD PMP ECCENTRIC SHEAVE	1	MOUSE-5-01-CABIN FRAMES
1	MOUSE-2-10-FD PMP ECCENTRIC STRAP	1	MOUSE-5-02-CABIN ROOF
1	MOUSE-2-11-FD PMP ECCENTRIC STRAP ROD	1	MOUSE-5-03-CABIN REAR DOOR
1	MOUSE-2-12-SLIDE VALVE ECCENTRIC STRAP	3	MOUSE-5-04-CABIN HINGE BRACKT
1	MOUSE-2-12-SLIDE VALVE ECCENTRIC STRAP	1	MOUSE-5-05-DOOR HANDLE
2	MOUSE-2-13-SLIDE VALVE ECCENTRIC STRAP ROD	1	MOUSE-5-06-CABIN ROOF BELL
2	MOUSE-2-14-COUPLING ROD	1	MOUSE-5-07-DUMMY WHISTLE
2	MOUSE-2-15-PISTON+CROSSHEAD	1	MOUSE-RAIL 184mm
2	MOUSE-2-16-CON-ROD		
1	MOUSE-2-17-SLIDE VALVE		
1	MOUSE-2-17-SLIDE VALVE		
1	MOUSE-2-18-MECH. WTR PMP PISTON		

